


REPLACEMENT

Limelight Corner LED - Direct Light Bar Harness


Purpose

Please be advised that on all Limelight models the power supply used to power the two front corner lights has been removed. After a thorough review of lighting power consumption, along with a software code change to better handle power distribution, it was determined that this power supply was no longer required. The front corner lights will now be powered directly from the control box, similar to all other light harnesses. Should service be required on a power supply component in an early unit (first/second quarter 2018 build), a replacement power supply is not needed – simply update the software code to the latest version and connect the corner lights to the control box (using the appropriate adapter).

1. Remove the equipment compartment panel to access the control box. Remove control box cover.

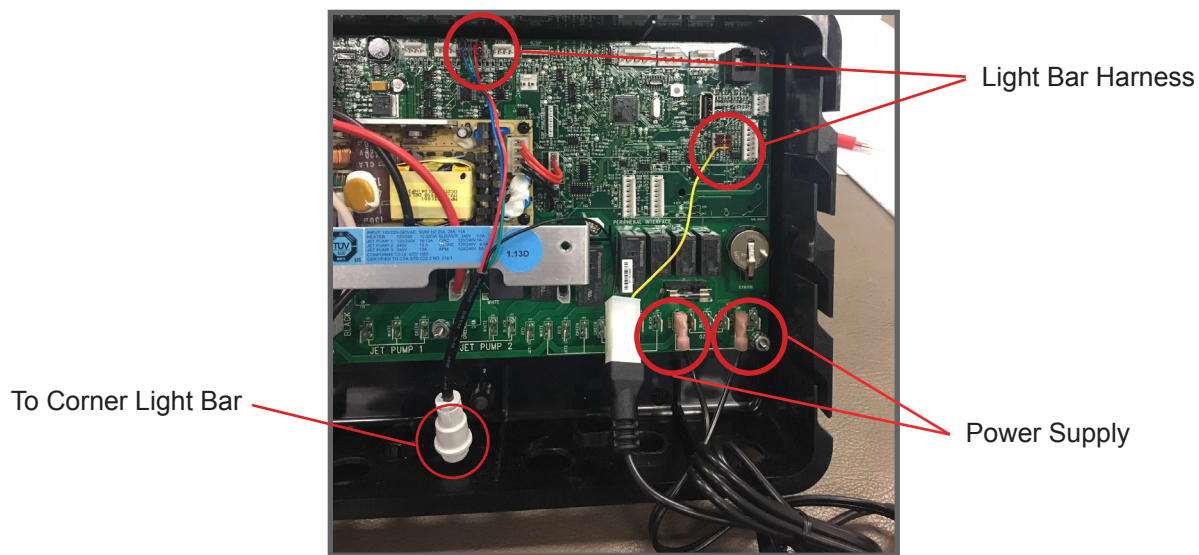

2. Disconnect the Light Bar Harness and Power Supply from the Control Box and Corner Light Bar.

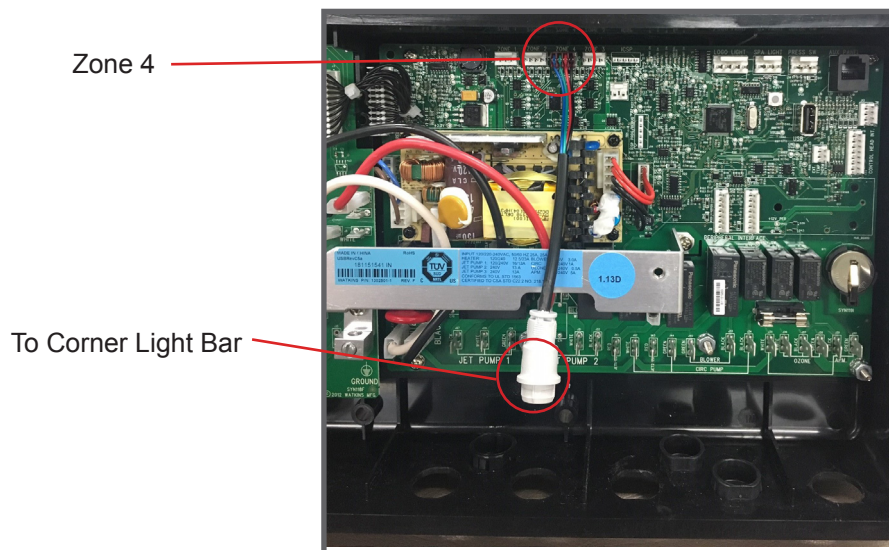

3. Connect the Direct Light Bar Harness to Zone 4 of the Control Box and the Corner Light Bar. Update Software Code. Replace control box cover and equipment compartment panel. Test for proper operation.